

MAV-SenseTM Site Survey Quick Start Guide

Step 1: Read TMC Pre-Survey Guide.
Place MAV-SenseTM in desired location.




[Pre-Survey Guide](#)




[Setup Video](#)

Step 2: Loosen adjustable arm. Insert and position display unit at comfortable angle. Tighten adjustable arm.

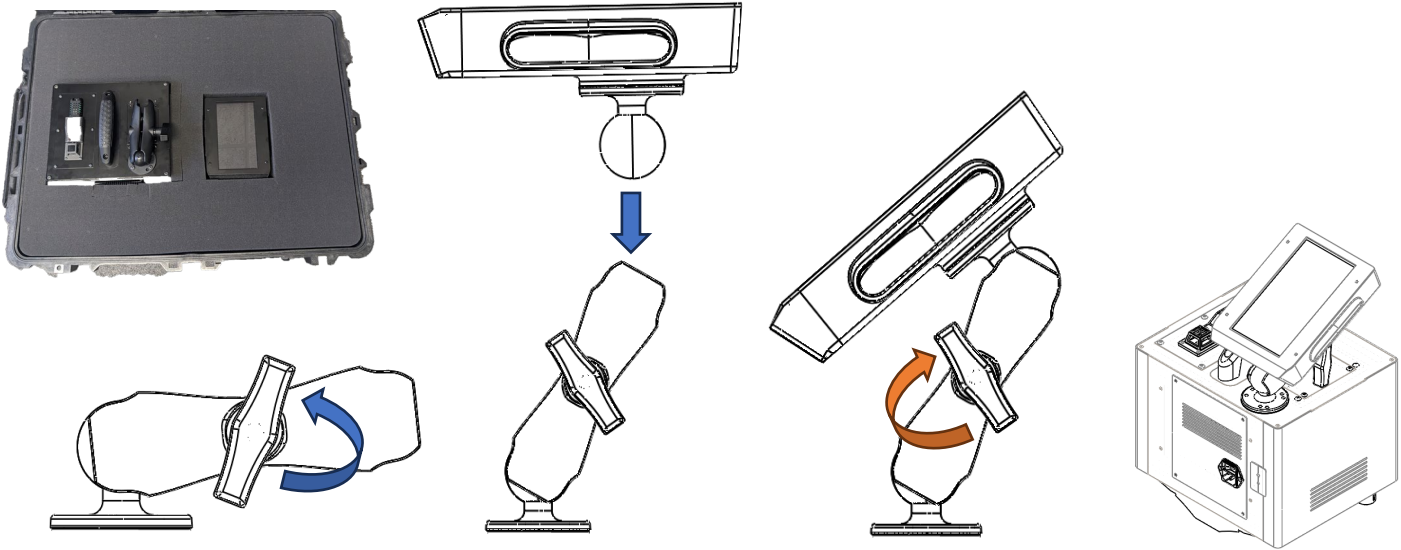

Step 3: Connect Micro USB and HDMI cords from main unit to connectors on downward facing edge of display

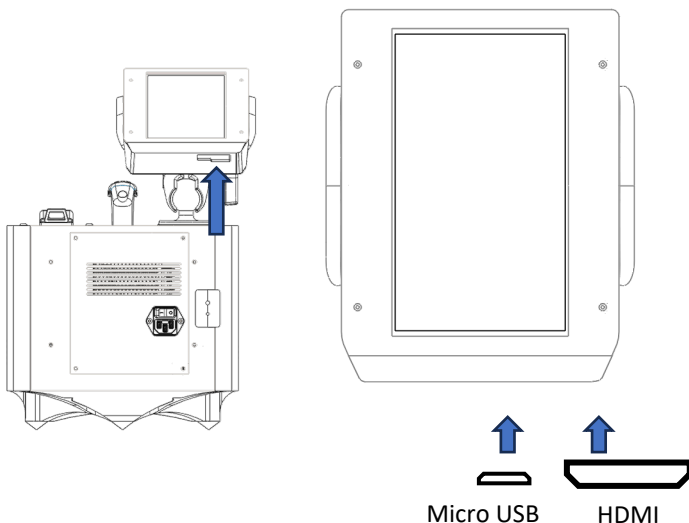


Step 4: Connect 6 ft power cord from front of MAV-SenseTM to wall outlet. Extension cord (not included) may be required




Step 5: Switch master power to "on" on rear of the MAV-SenseTM

It may take up to a minute for an image to appear on the screen

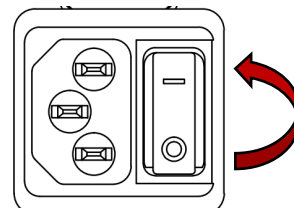


MAV-SenseTM Site Survey Quick Start Guide


Step 6: Adjust the slider on the Touchscreen display to the desired length of survey. Press play.

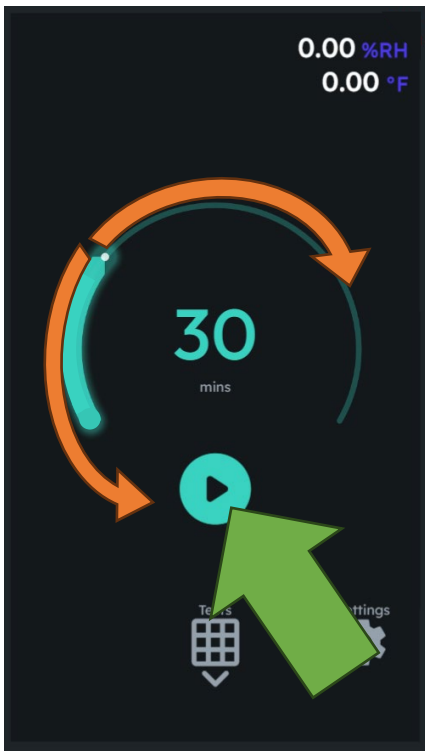

Step 7: Upon completion of survey. Fill out the test name. Fill out notes with pertinent information such as location, anomalous disturbances, etc.

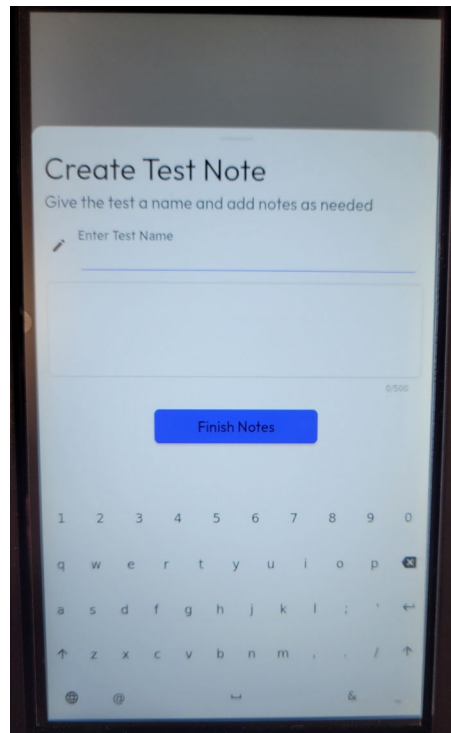

Step 8 (Optional): Press grid button to display previous test.

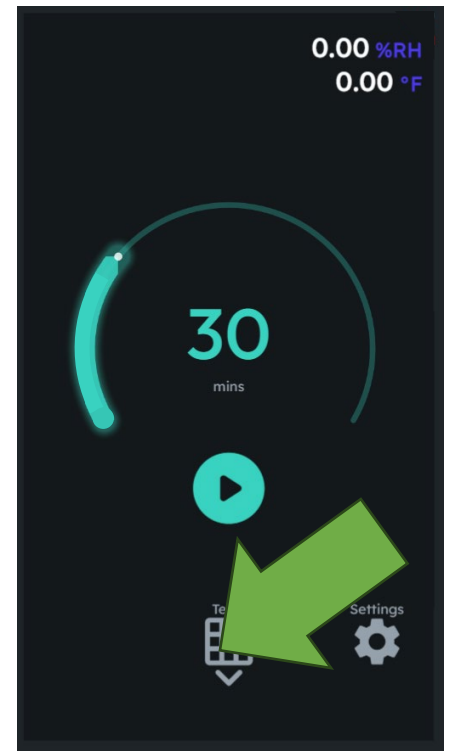

Step 9: When your test has concluded, switch the main power off (step 5). Please pack up all components back into the shipping case. Please take care to place the components back in the spaces you removed them from.

Step 10: Place included shipping label over top of the label used to send kit. Use included zip-ties to seal up the shipping case. Bring to shipping dock or nearest carrier facility and return to TMC.

For more information, please contact TMC

Thank You!